



## Lines And Seals Gutters With 100% Rubber!

When gutters leak, problems are just beginning. Deterioration rapidly grows, leaks increase, and replacement soon becomes inevitable. The alternative – reline with a seamless rubber system.

Topps® is the answer. Seal and reline all types of gutters with revolutionary GutterGuard®. This extremely tough, remarkable rubber liner goes on by spray or brush, making a perfect custom fit every time. Because it's made using 100% rubber, GutterGuard® prevents further moisture attack, giving your gutter a durable seal.



GutterGuard's amazing ability to cling to edges works where you need it most – giving extra protection at seams and rivets. Water is blocked out. So is debris build-up, a common source for rust and corrosion to develop. Your system, with GutterGuard®, flows better too with less cleaning.

GutterGuard® – your most affordable gutter protection package to prevent early replacement. Your gutter system gets a complete, custom fit seamless rubber liner with a simple application.

### Typical Specifications

Ultimate Elongation	550%
Ultimate tensile strength	1000 p.s.i.
Water vapor permeability	0.25 perms
Solids	50% min.
VOC	<500 g/l

- ◆ **Leaves no seams!**
- ◆ **No temporary tapes – no dams!**
- ◆ **The durability of 100% rubber!**
- ◆ **Economical, easy application!**

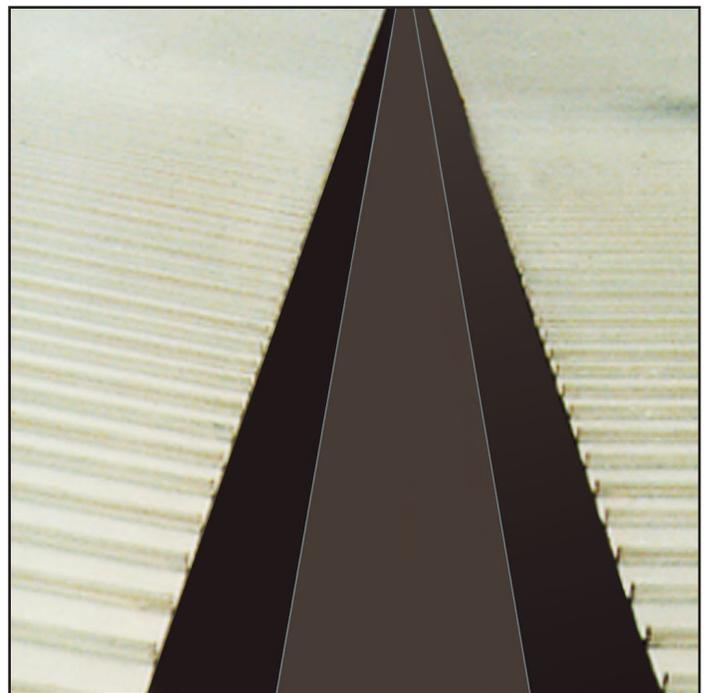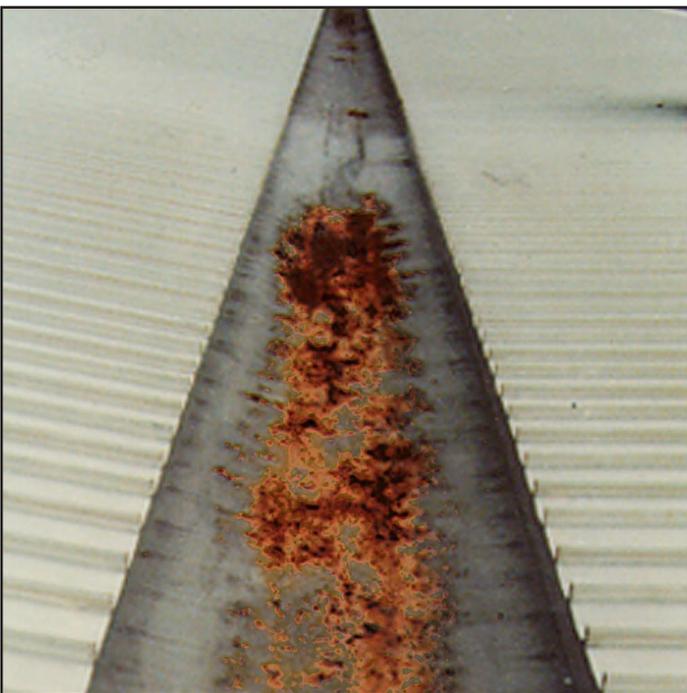

OMPBG201323


## It's Easy to Restore Gutters with **GutterGuard®**

**1** Clean gutters thoroughly. For metal gutters, wire brush or apply Topps® RustArrestor™ to remove rust, then rinse. The surface must be completely clean and dry before application of the GutterGuard® System.

**2** Tighten all fasteners. Replace any worn, missing, or stripped fasteners with flat head type of slightly larger size. Replace perforated areas as needed, or, using aluminum flashing, fit a new piece into a thick bed of Polyprene® or GutterGuard® and secure with fasteners. The new metal should be flush and extend at least 3" beyond the repair area. Heavily coat all edges.


**3** Dab all fasteners with GutterGuard. Apply one even coat of GutterGuard at 2 gallons per 100 square feet using a stiff paint brush. Begin on the edges, allowing material to flow onto the pan. Move excess down the gutter with a heavier build-up along edges.

*Wire brushing rust from metal valley gutter.*

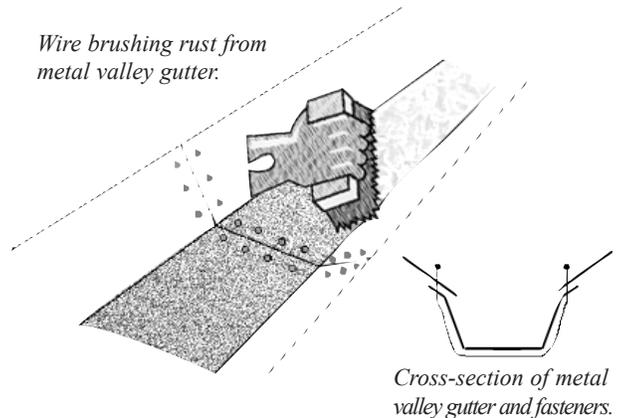


*Cross-section of metal valley gutter and fasteners.*


*Evenly apply a thick coat of GutterGuard® with roofing brush to create a rubber liner.*

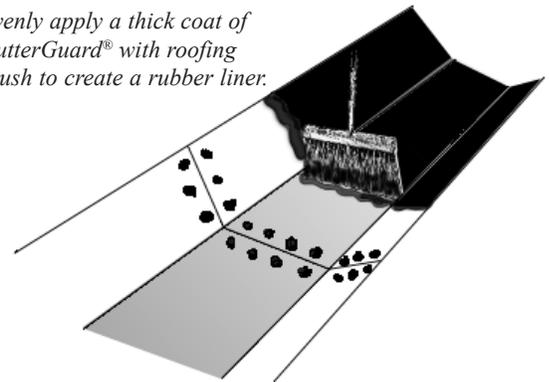

*Concrete gutters require PolyCore™ embedded in GutterGuard® at joints to add reinforcement.*

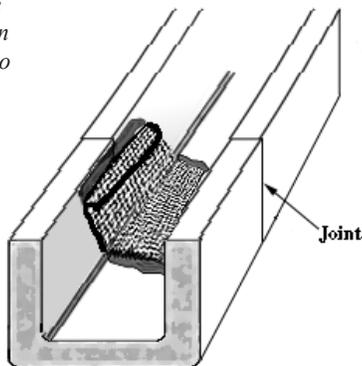

*Metal gutters hanging from eaves need extra protection at seams and fasteners.*

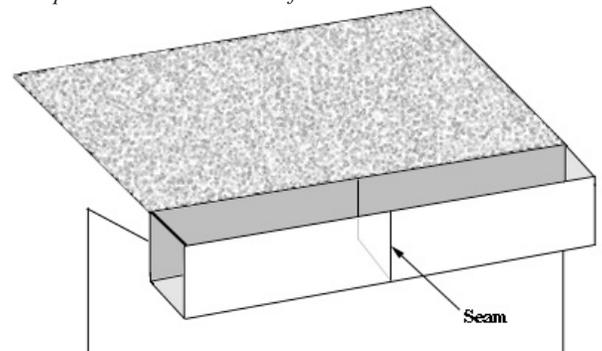

**Independent Installer:**