




Installing Starter Strips Using Roof Cement



Starter manufacturer approved roof cement



Place 8" (no thicker the 1/8") of roof cement

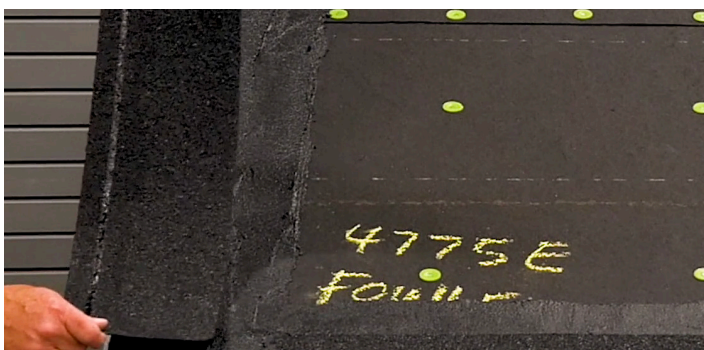

Lay starter strip into roof cement (1/4" over edge)



Install shingles using manufacturer instructions

Write the address on the roof deck.

Take photos of:

- Starter strips in place along eave and rake



Complete the Roofing Compliance Form

Documentation Considerations

FORTIFIEDHOME.ORG