


RidgeArmor™ Installation Instructions

Basic Installation Guide


1. Fasten each side of the panel 1 in. from each end, then every 6 in. O.C. thereafter.

1 FASTENING PATTERN

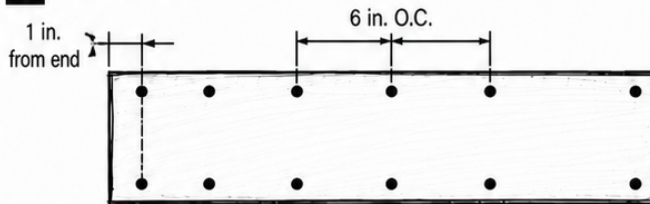


2. Overlap adjoining panels 1/2 in. by aligning the end of one panel with the formed hem line on the next panel.

2 OVERLAP ADJOINING PANELS

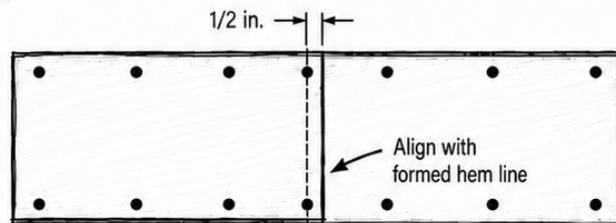


3. Trim panels at ridge ends as needed using metal snips.

3 TRIM AT RIDGE ENDS AS NEEDED

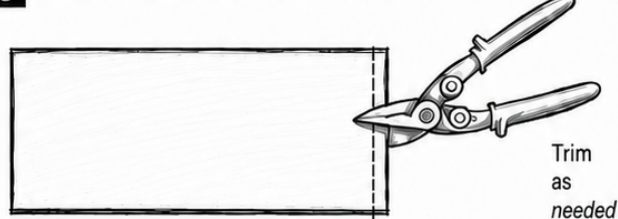

4. At ridge ends, extend RidgeArmor™ a minimum of 2 in. past the end of the ridge vent slot.

4 RIDGE END EXTENSION

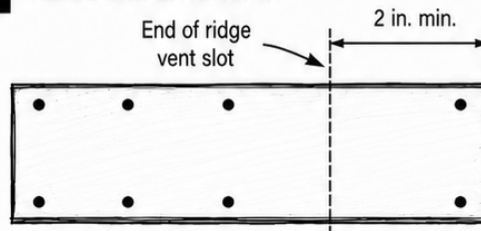

5. Use two fasteners across the end of the panel at each ridge end.
6. RidgeArmor™ may be used on roof pitches from 2/12 to 12/12.
7. Use corrosion-resistant roofing fasteners compatible with the roof assembly.



Roof pitch range: 2/12 to 12/12

Use corrosion-resistant roofing fasteners compatible with the roof assembly.